




iPad 2 GSM Headphone Jack Assembly Replacement

Prerequisite only.


Written By: Walter Galan

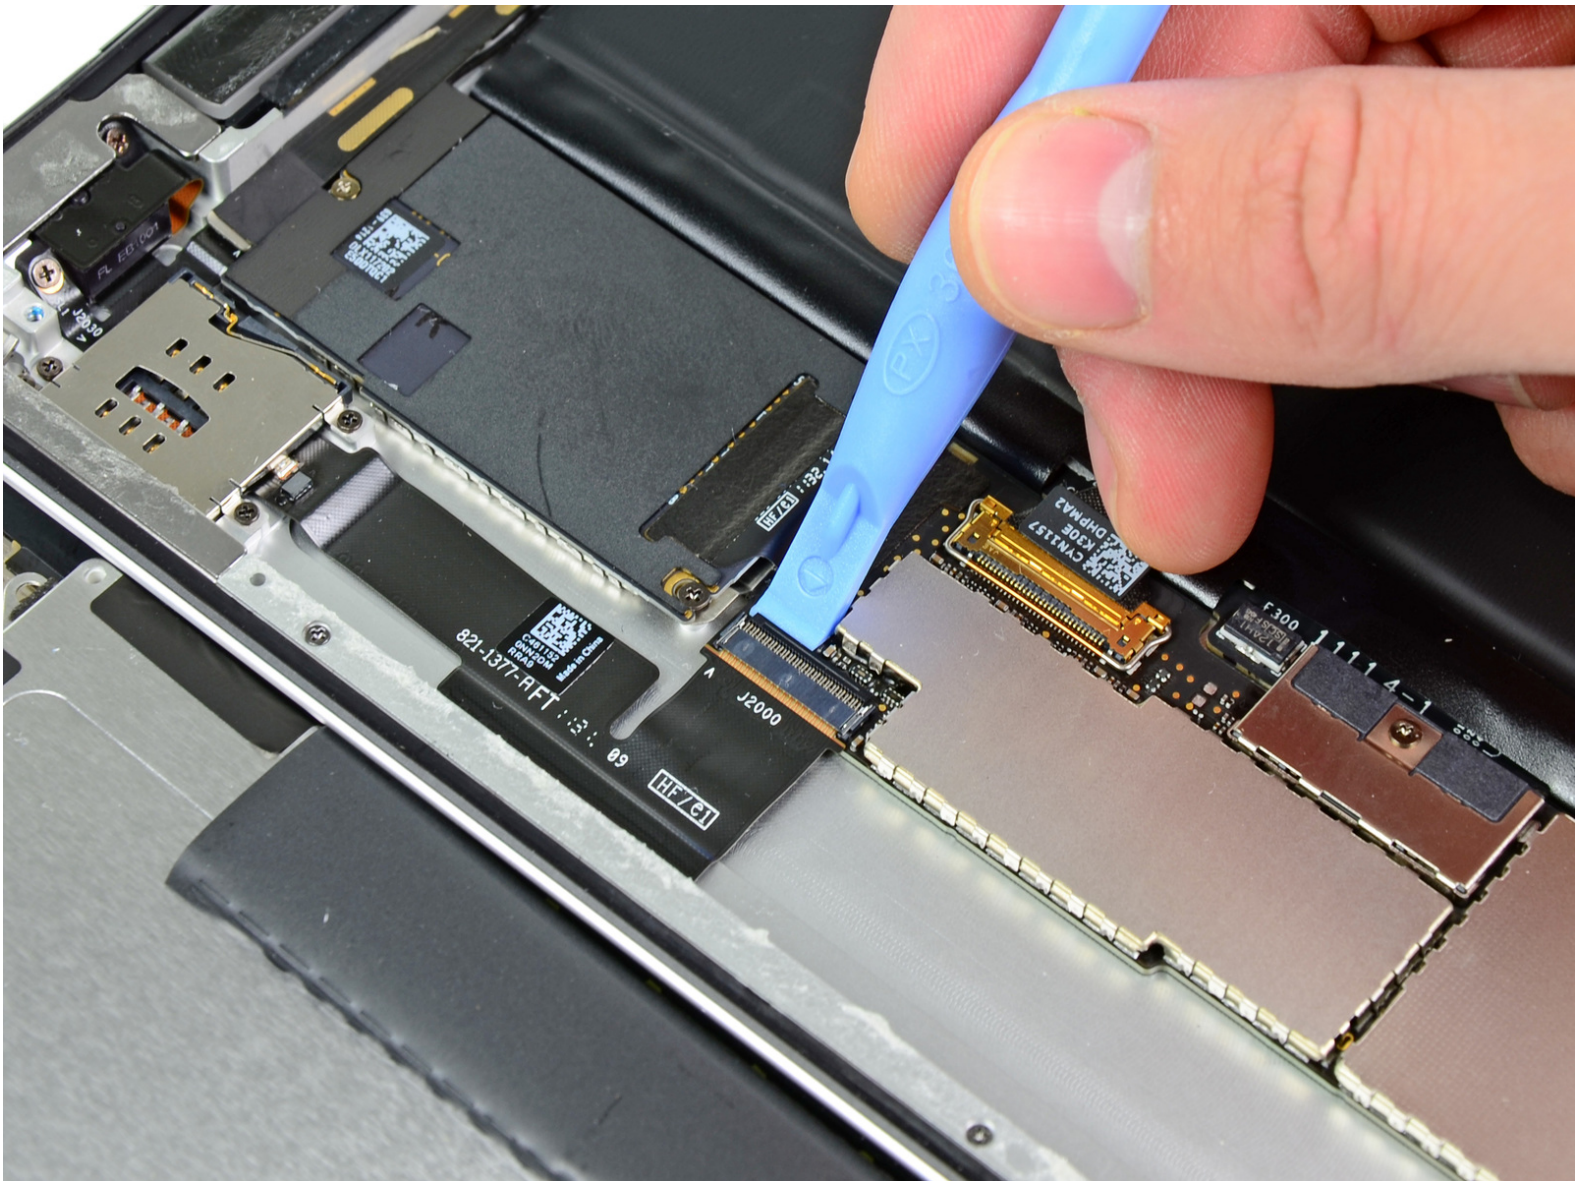

INTRODUCTION

Prerequisite only.

Step 1 — Headphone Jack Assembly

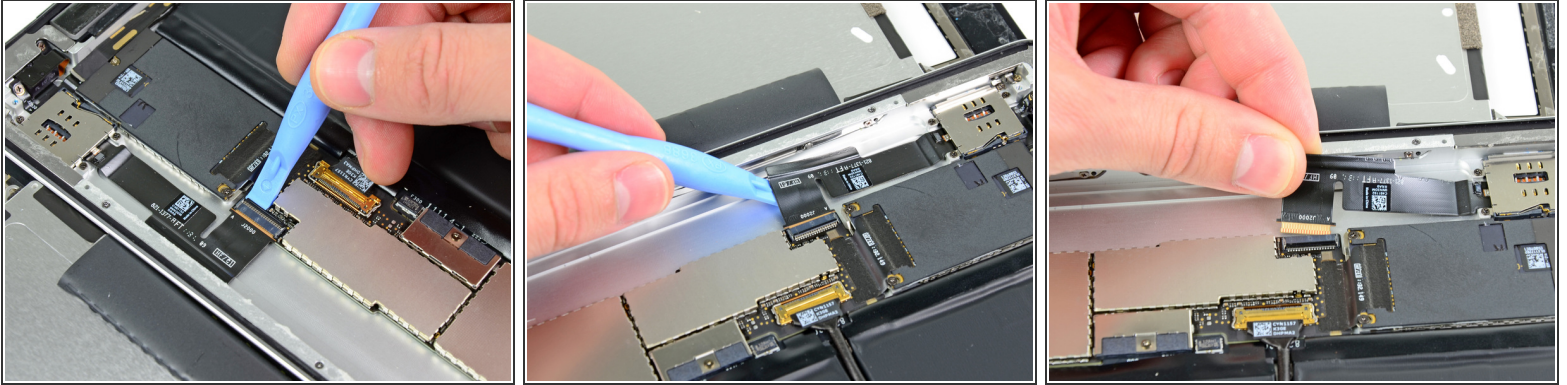


- Use the flat end of a plastic opening tool to flip up the retaining flap on the headphone jack and front-facing camera ribbon cable ZIF socket.

⚠ Be sure you are prying up on the hinged retaining flap, **not** the socket itself.


- Run a plastic opening tool underneath the headphone jack and front-facing camera cable to free it from the adhesive attaching the cable to the rear panel.
- Pull the headphone jack and front-facing camera ribbon cable straight out of its socket on the logic board.

Step 2

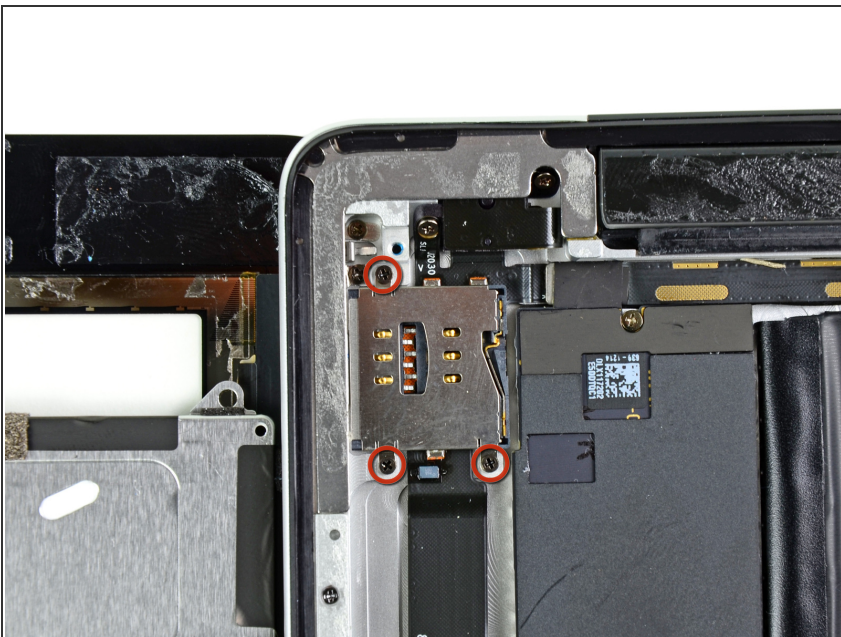

- Remove the three 2 mm Phillips screws securing the SIM slot to the rear panel.

Step 3

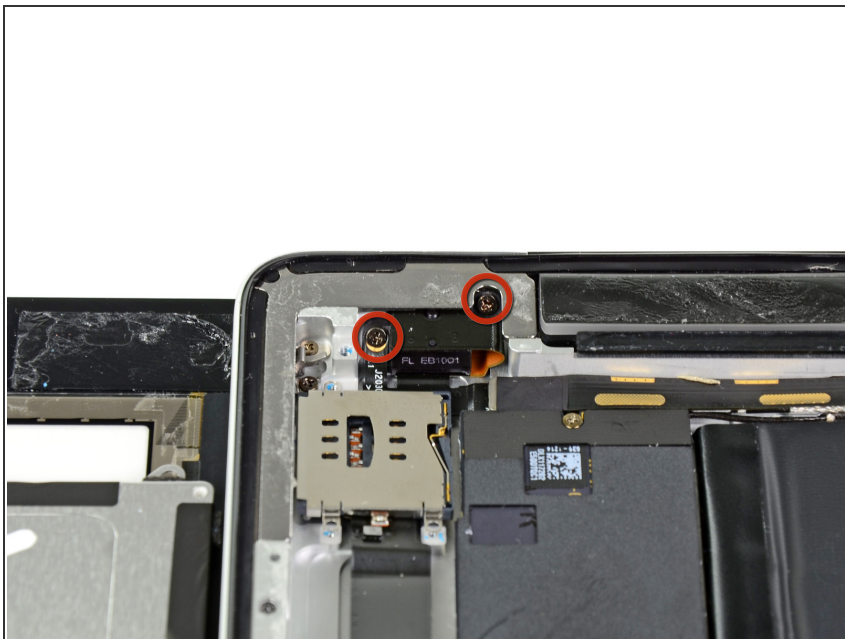

- Remove the two 2.9 mm Phillips screws securing the headphone jack to the rear panel.

Step 4



- Use a plastic opening tool to help pull the headphone jack away from its recess in the top edge of the iPad.



⚠ Don't try to remove the assembly just yet.

Step 5




- Carefully peel the front camera and microphone cables off the rear panel.

Step 6

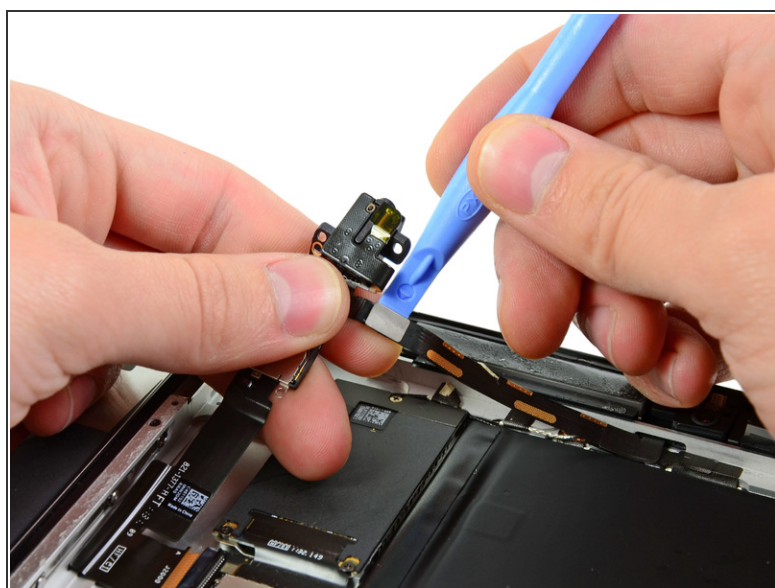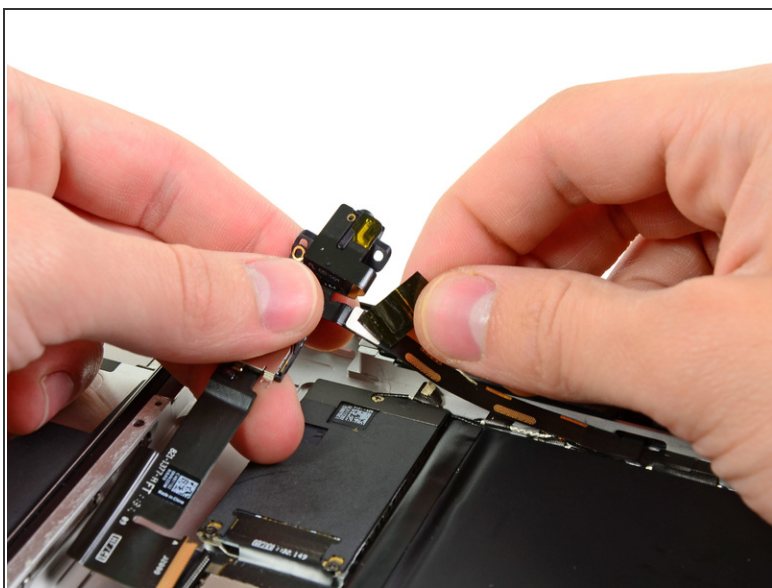

- Carefully remove the strip of tape covering the front camera cable connector.
- Use the edge of a plastic opening tool to disconnect the front camera cable from the headphone jack cable.

Step 7

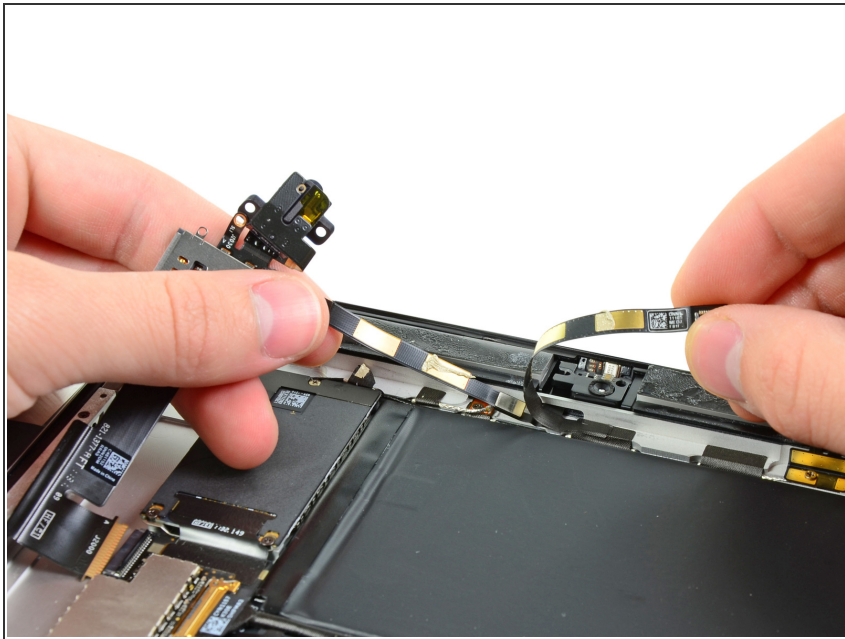

- Carefully peel the front camera cable off the bottom ribbon cable attached to the headphone jack.

To reassemble your device, follow these instructions in reverse order.

This document was last generated on 2017-06-18 03:33:20 AM.